


BeneView T1 配件安装说明书


BeneView T1 Installation Accessories

Instructions for Use


主机与手柄配合使用
Using monitor with monitor handle

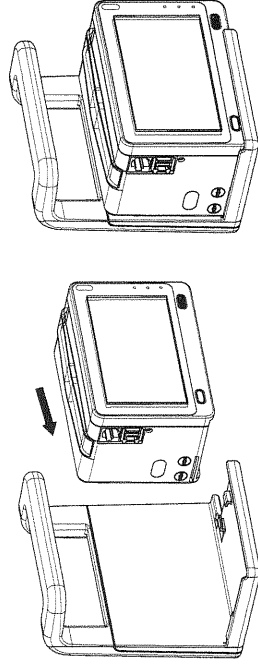


主机通过十字锁安装在横杆和竖杆上
Mounting monitor on transverse and vertical rod

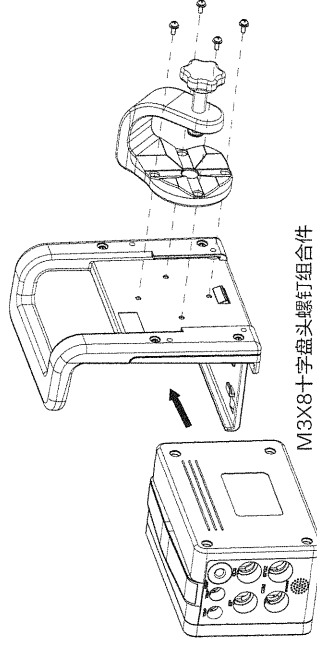

M3X8 十字盘头螺钉组合件
M3X8 philips pan-head screw assembly
数量: 4枚, Qty: 4
PN: 030-000099-00

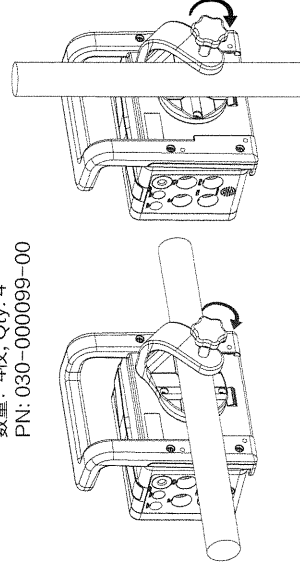


主机与床尾挂钩配合使用
Hooking monitor on bedrail

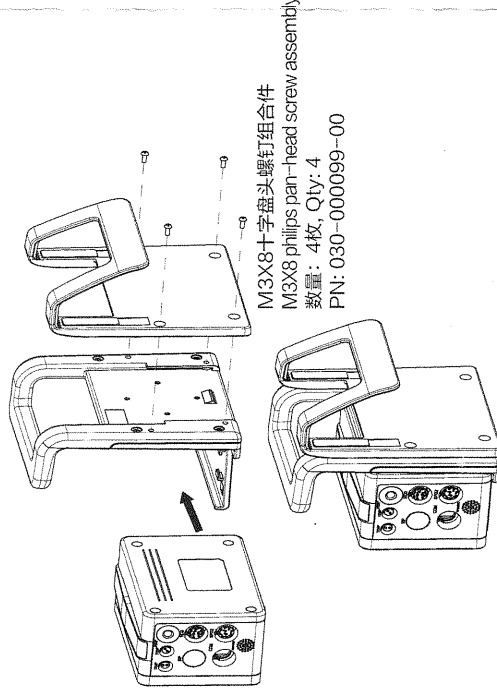


M3X8 十字盘头螺钉组合件
M3X8 philips pan-head screw assembly
数量: 4枚, Qty: 4
PN: 030-000099-00


外置模块通过十字锁安装在横杆和竖杆上
Mounting external module on transverse & vertical rod

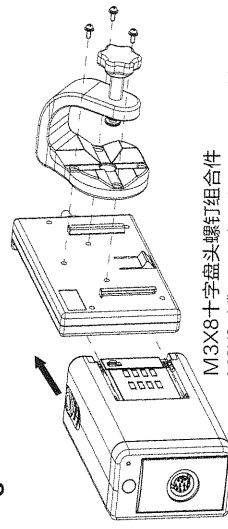


M3X8 十字盘头螺钉组合件
M3X8 philips pan-head screw assembly
数量: 3枚, Qty: 3
PN: 030-000099-00

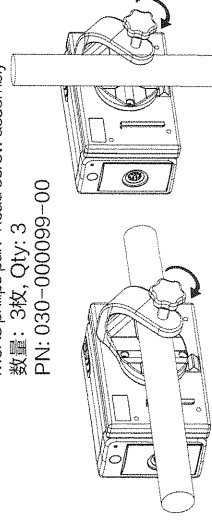

外置模块与床尾挂钩配合使用
Hooking external module on bed rail

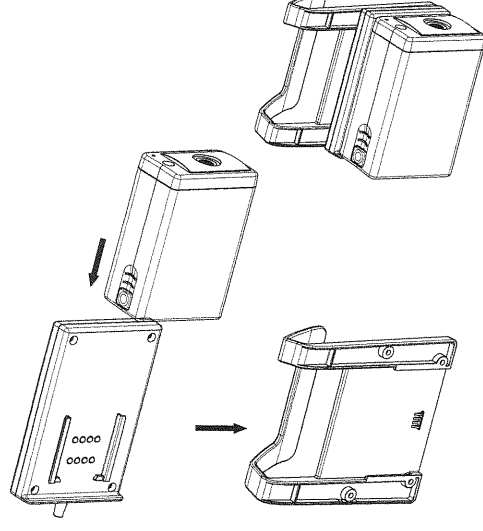

主机、外置模块配合使用
Monitor in use with an external module

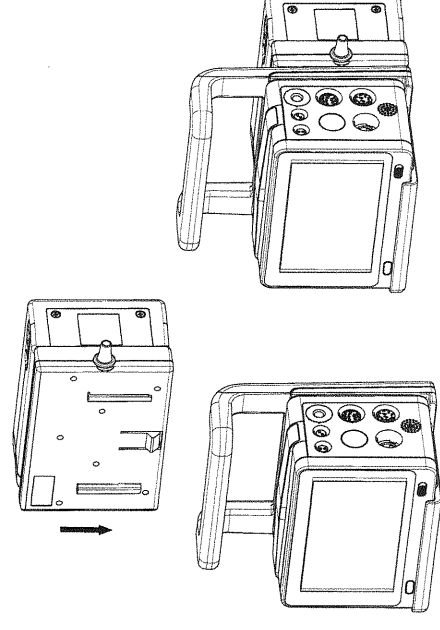

0-46-002908-00(1.0)